


TİP / TYPE / TYP

İRO } 52-62-72

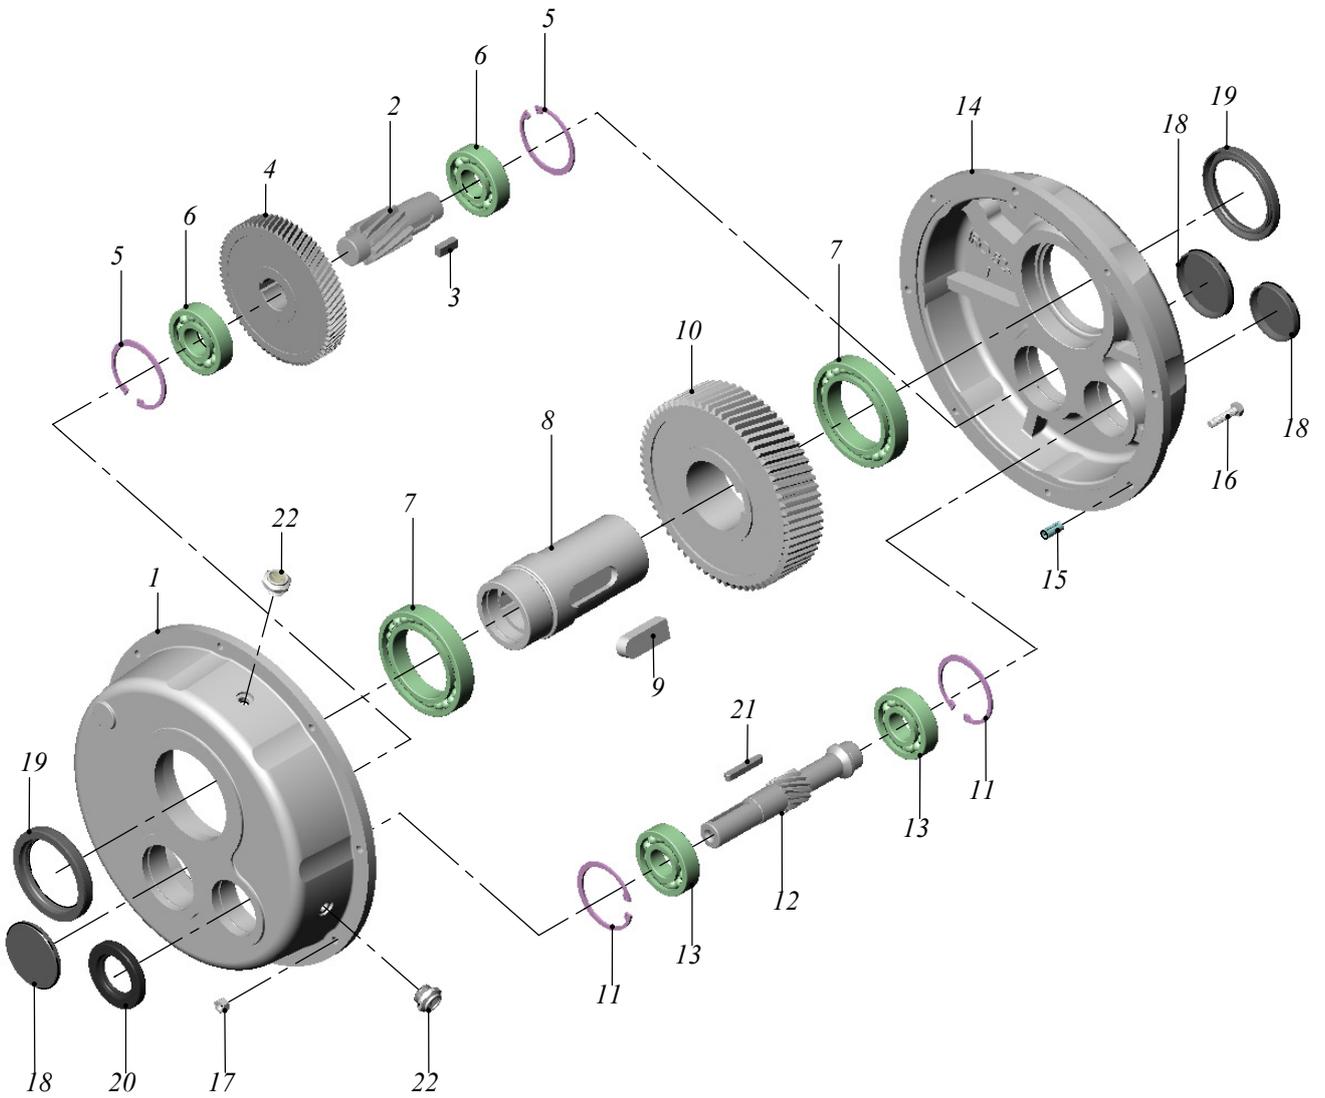

**Yedek Parça Listesi****General Parts List****Einzelteilliste****TİP / TYPE / TYP****İRO } 52-62-72**

<b>1- Alt Gövde</b>	1- Gear Case (Lower Part)	<i>1- Getriebegehäuse (Unterteil)</i>
<b>2- Milli Dişli Z3</b>	2- Gear Z3	<i>2- Ritzelwelle Z3</i>
<b>3- Kama</b>	3- Key	<i>3- Passfeder</i>
<b>4- Dişli Z2</b>	4- Gear Z2	<i>4- Rad Z2</i>
<b>5- Segman</b>	5- Circlip	<i>5- Sicherungsring</i>
<b>6- Rulman</b>	6- Bearing	<i>6- Lager</i>
<b>7- Rulman</b>	7- Bearing	<i>7- Lager</i>
<b>8- Kovan</b>	8- Hollow Shaft	<i>8- Hohlwelle</i>
<b>9- Kama</b>	9- Key	<i>9- Passfeder</i>
<b>10- Dişli Z4</b>	10- Gear Z4	<i>10- Rad Z4</i>
<b>11- Segman</b>	11- Circlip	<i>11- Sicherungsring</i>
<b>12- Milli Dişli Z1 (Giriş Mili)</b>	12- Gear Z1 (Input Shaft)	<i>12- Ritzelwelle Z1 (Antr. Welle)</i>
<b>13- Rulman</b>	13- Bearing	<i>13- Lager</i>
<b>14- Üst Gövde</b>	14- Gear Case (Upper Part)	<i>14- Getriebegehäuse (Überteil)</i>
<b>16- Civata</b>	16- Bolt	<i>15- Sechskantschraube</i>
<b>15- Pim</b>	15- Pin	<i>16- Stift</i>
<b>17- Somun</b>	17- Nut	<i>17- Mutter</i>
<b>18- Tapa</b>	18- Locking Cap	<i>18- Verschlusskappe</i>
<b>19- Keçe</b>	19- Seal	<i>19- Wellendichtring</i>
<b>20- Keçe</b>	20- Seal	<i>20- Wellendichtring</i>
<b>21- Kama</b>	21- Key	<i>21- Passfeder</i>
<b>22- Yağ Seviye Tespit Civatası</b>	22- Oil Level Plug	<i>22- Ölstandschrabe</i>