


TİP / TYPE / TYP

İRSA - İRSAM } 201 - 250
İRSF - İRSFM }

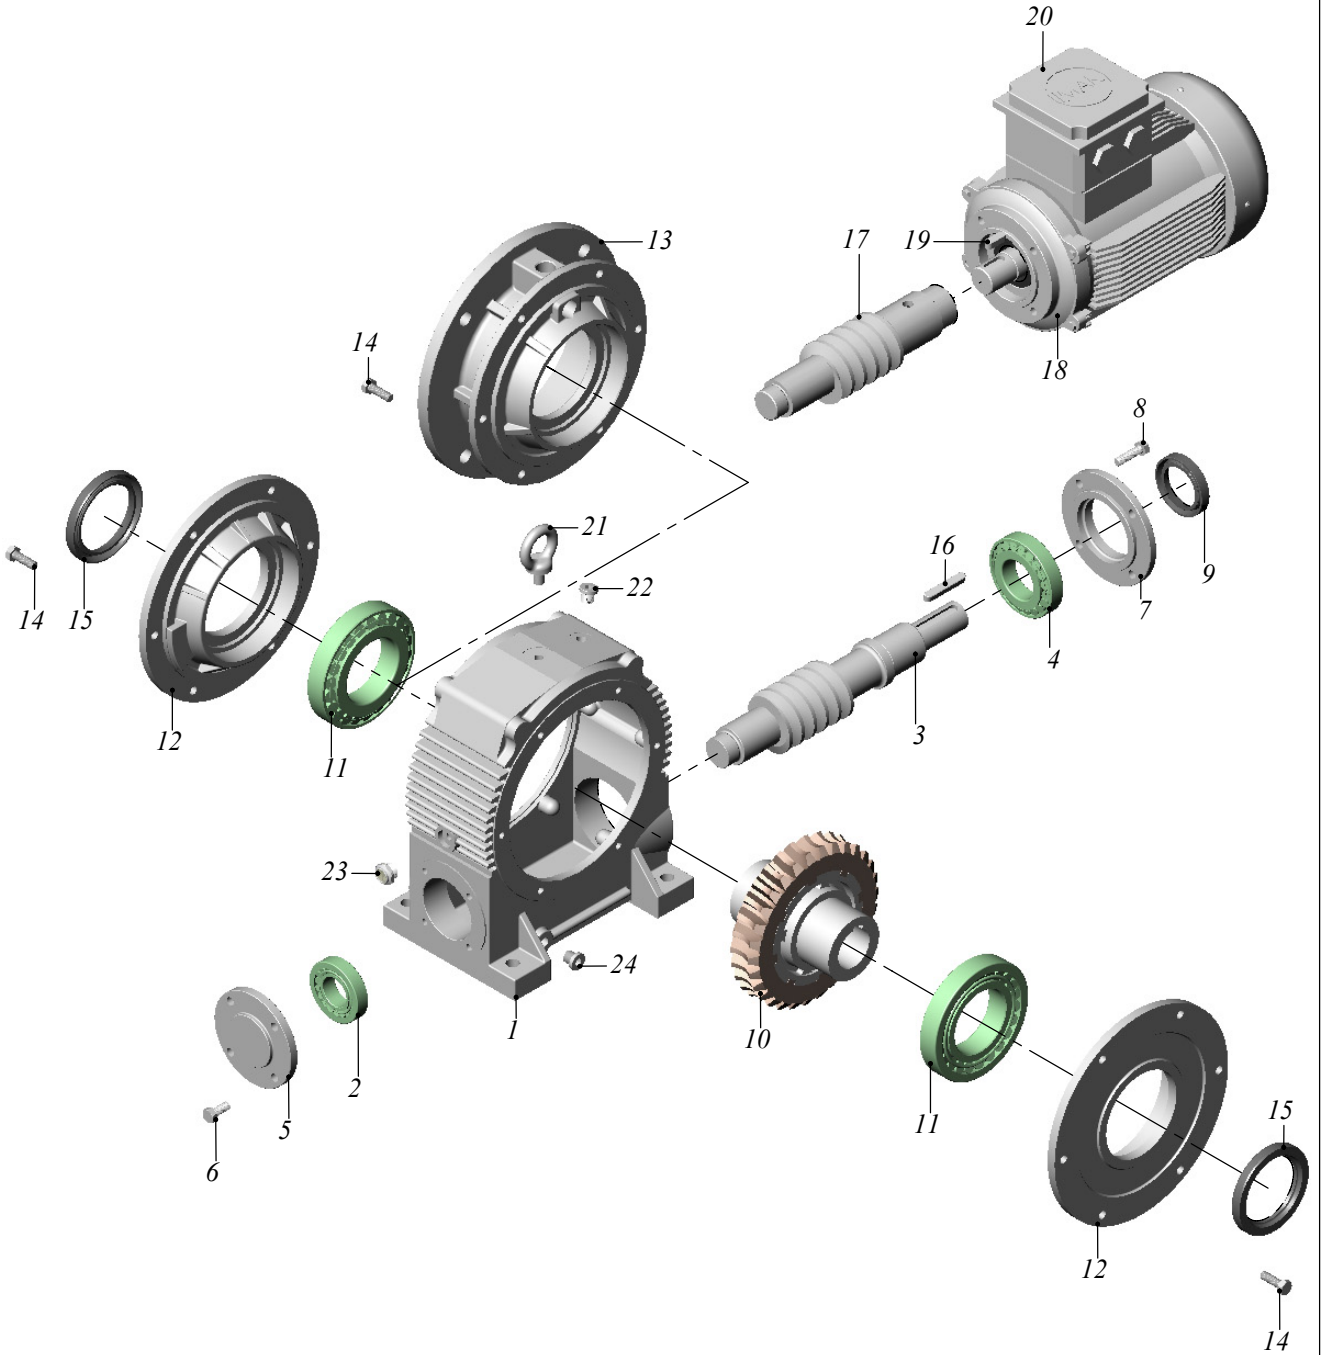

Yedek Parça Listesi**General Parts List****Einzelteilliste****TİP / TYPE / TYP****İRSA / İRSF / İRSAM / İRSFM } 201-250**

1- Gövde	1- Gear Case	<i>1- Getriebegehäuse</i>
2- Rulman	2- Bearing	<i>2- Lager</i>
3- Sonsuz Vida (Giriş Mili)	3- Worm (Input Shaft)	<i>3- Schnecke (Antriebswelle)</i>
4- Rulman	4- Bearing	<i>4- Lager</i>
5- Rulman Baskı Kapağı	5- Bearing Cover	<i>5- Lagerdeckel</i>
6- Cıvata	6- Bolt	<i>6- Sechskantschraube</i>
7- Keçe Kapağı	7- Seal Cover	<i>7- Dichtringflansch</i>
8- Cıvata	8- Bolt	<i>8- Sechskantschraube</i>
9- Keçe	9- Seal	<i>9- Wellendichtring</i>
10- Sonsuz Vida Çarkı	10- Worm Wheel	<i>10- Schneckenrad</i>
11- Rulman	11- Bearing	<i>11- Lager</i>
12- Büyük Kapak	12- Big Cover	<i>12- Abtriebsdeckel</i>
13- Flanşlı Kapak	13- Flange	<i>13- Flansch</i>
14- Cıvata	14- Bolt	<i>14- Sechskantschraube</i>
15- Keçe	15- Seal	<i>15- Wellendichtring</i>
16- Kama	16- Key	<i>16- Passfeder</i>
21- Sonsuz Vida (Motorlu)	21- Worm (For Electric Motor)	<i>17- Schnecke (Für Elektromotor)</i>
18- Motor Bağlantı Kapağı	18- Motor Mounting Adapter	<i>18- Motoranschlussflansch</i>
19- Kama	19- Key	<i>19- Passfeder</i>
20- Motor	20- Electric Motor	<i>20- Elektromotor</i>
21- Taşıma Kancası	21- Lifting Eye Bolt	<i>21- Ringschraube</i>
22- Havalandırma Cıvatası	22- Vent Plug	<i>22- Entlüftungsschraube</i>
23- Yağ Seviye Tespit Cıvatası	23- Oil Level Plug	<i>23- Ölstandschraube</i>
24- Yağ Boşaltma Cıvatası	24- Drain Plug	<i>24- Verschluss-Schraube</i>