



Semboller :

Symbols :

Symboles :



Yağ Doldurma ve Havalandırma

Oil Filling and Vent Plug

Valve d'aération



Yağ Seviye Tespit

Oil Level

Niveau d'huile



Yağ Boşaltma

Oil Drain Plug

Bouchon de drainage

TİP Type	Bağlantı Pozisyonları ve Yağ Miktarları (litre) Oil Quantities for Mounting Positions (liter) Quantités d'huiles en fonction de la position de montage (litres)											
	P1	V1	P2	V2	P3	V3	P4	V4	P5	V5	P6	V6
	MA.... 503-502	23		35		20		30		36		35
MA.... 603-602	26		39		22		33		40		39	
MA.... 704-703-702	38		55		32		48		58		55	
MA.... 804-803-802	42		65		36		53		66		63	
MA.... 904-903-902	51		81		45		74		82		78	
MA.... 1004-1003-1002	58		92		51		80		92		88	